


PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Shower head (5) and shower arm (3) are sold separately.
- * Shower head is fitted with a flow regulator.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (1) over the threaded nipple (2). Screw the shower arm (3) onto the threaded nipple (2) and position as required, taking care not to damage the decorative finish. **DO NOT OVERTIGHTEN.**
- 3) Apply thread tape to the outlet thread (4) of shower arm (3). Carefully screw the shower head (5) onto the shower arm (3), taking care not to damage the decorative finish.

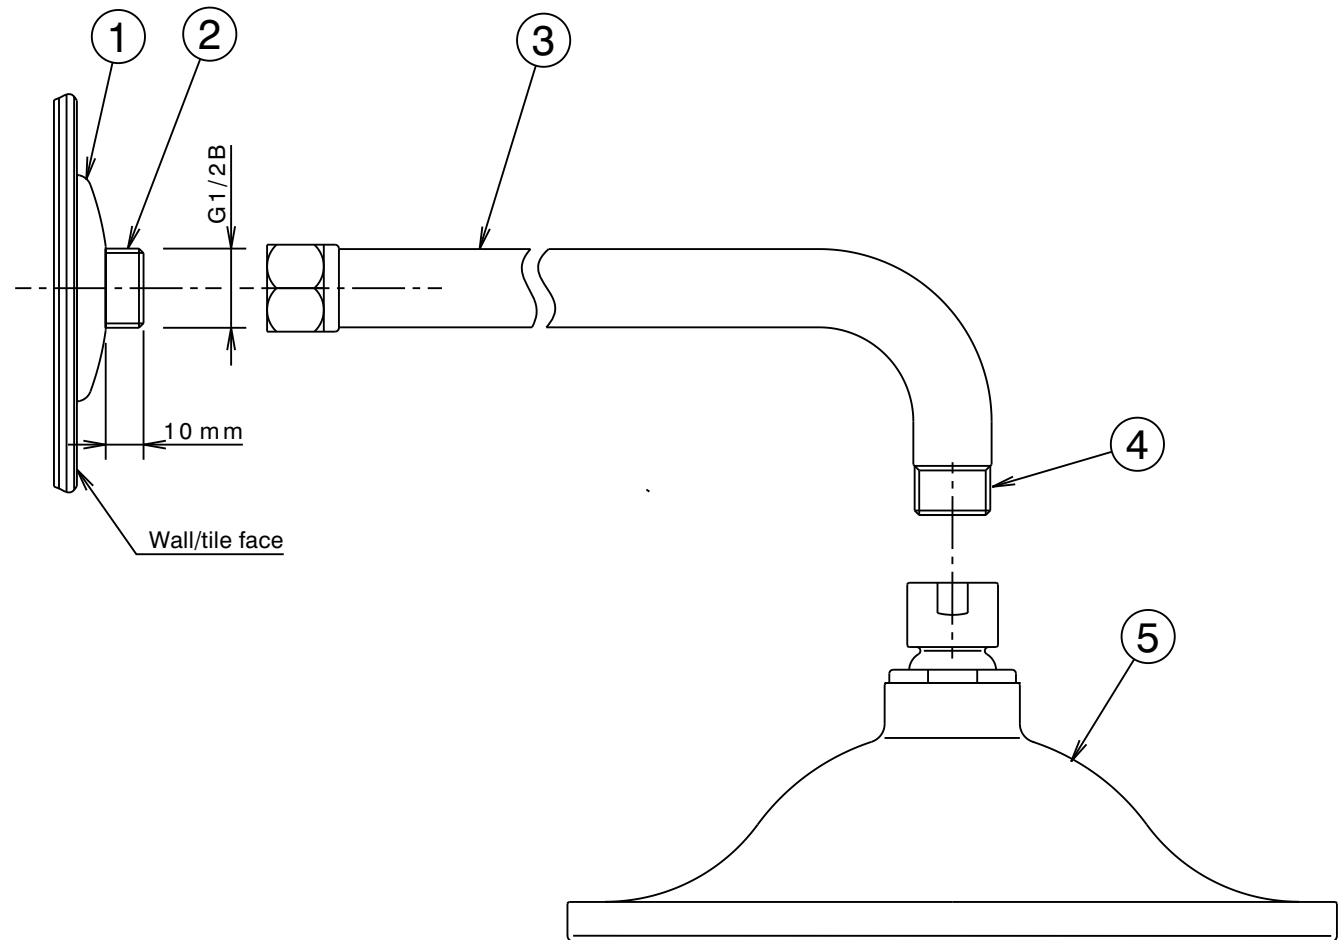

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation :-500 kPa maximum static pressure at any outlet within a building.
(Ref. AS/NZS 3500.1-2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.