


PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * Shower outlet is fitted with an 9 L/min flow regulator.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
- * Turn off hot and cold water supplies before installation.

Installation

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Place the cover plate (1) over the threaded nipple (2). Screw the inlet socket (3) onto the threaded nipple (2) and position shower as required. DO NOT OVERTIGHTEN.

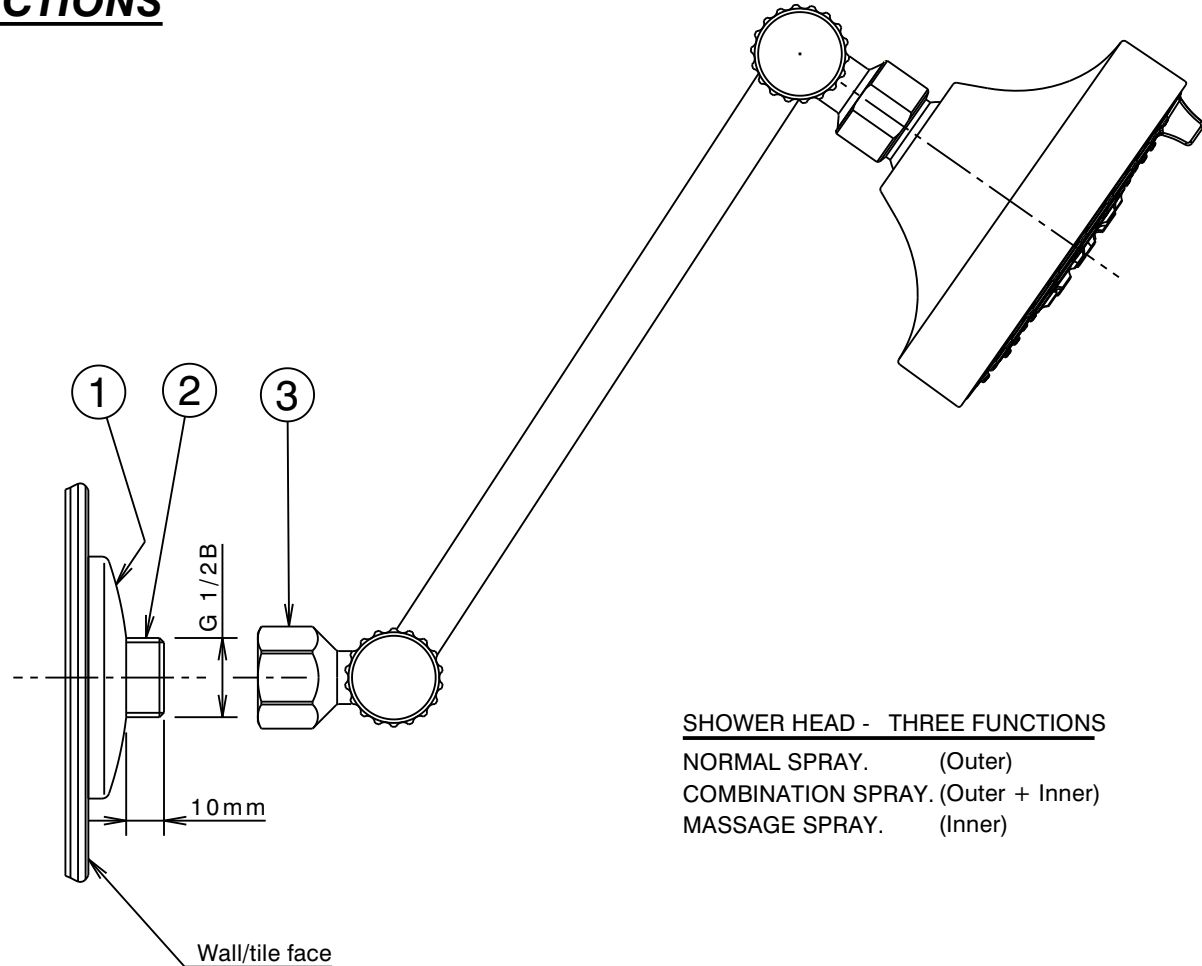

SHOWER HEAD - THREE FUNCTIONS

- NORMAL SPRAY. (Outer)
- COMBINATION SPRAY. (Outer + Inner)
- MESSAGE SPRAY. (Inner)

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static Inlet pressure range : 150 - 1000 kPa
New Regulation :- 500 kPa maximum static pressure at any outlet within a building.
(Ref. AS/NZS 3500.1- 2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.