

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

- * All pipework must be thoroughly flushed prior to installation.

Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
- 2) Slide the cover plate (3) together with the 'O'Rings over the outlet (2) as shown. Carefully screw the outlet (2) onto the threaded nipple (1) until the threaded end is close to the wall/tile face and the aerator insert (4) is pointing down as shown, taking care not to damage the decorative finish. **DO NOT OVERTIGHTEN.** Push the cover plate (3) along the outlet (2) until it contacts the wall/tile face.

Removing Aerator Insert

- 1) Aerator insert (4) can be removed with spanner (5).
- 2) Deposits of lime can be removed by washing in a vinegar solution.
- 3) When replacing aerator insert (4), be careful that thread is engaged correctly and 'O' ring is not damaged as it enters the bore. Tighten securely using spanner (5).

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation :-500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.

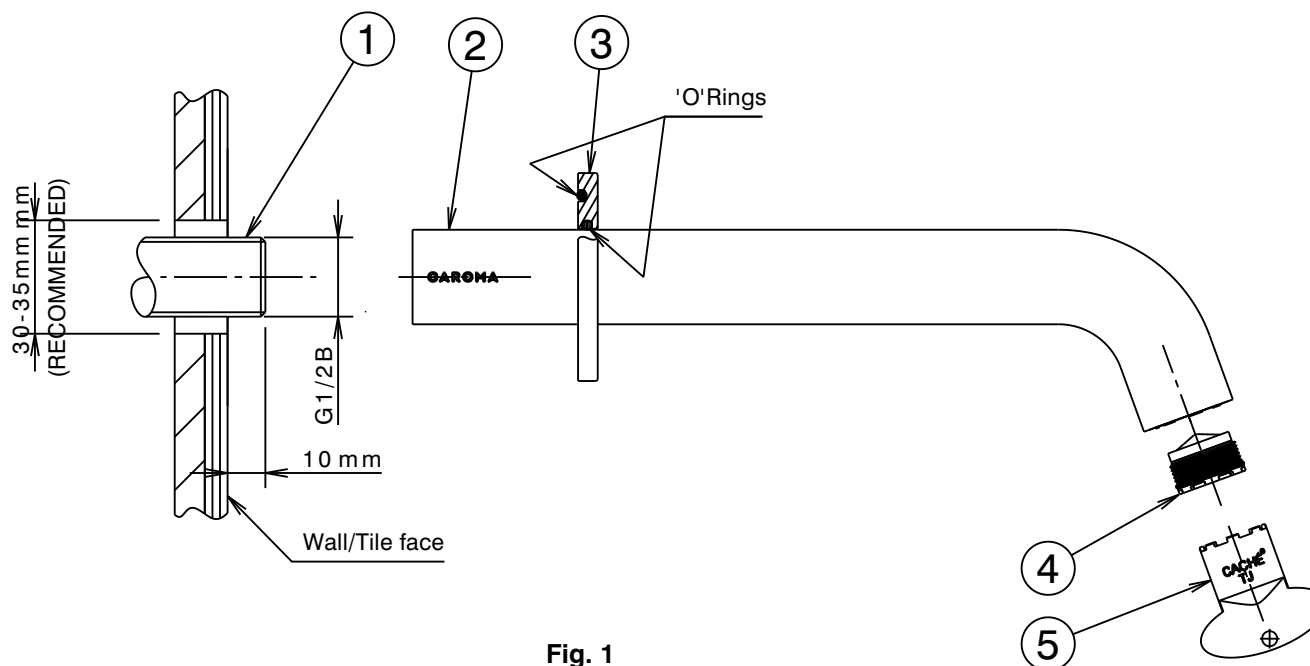


Fig. 1