

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

* All pipework must be thoroughly flushed prior to installation.

Installation (Fig.1)

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
- 2) Place the cover plate (1) over the threaded nipple (2), with the **Caroma** marking at the top. Screw the inlet of the Swivel bath outlet (3) onto the threaded nipple (1) and position as required. DO NOT OVERTIGHTEN.

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static Inlet pressure range : 150 -1000 kPa
New Regulation:- 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.

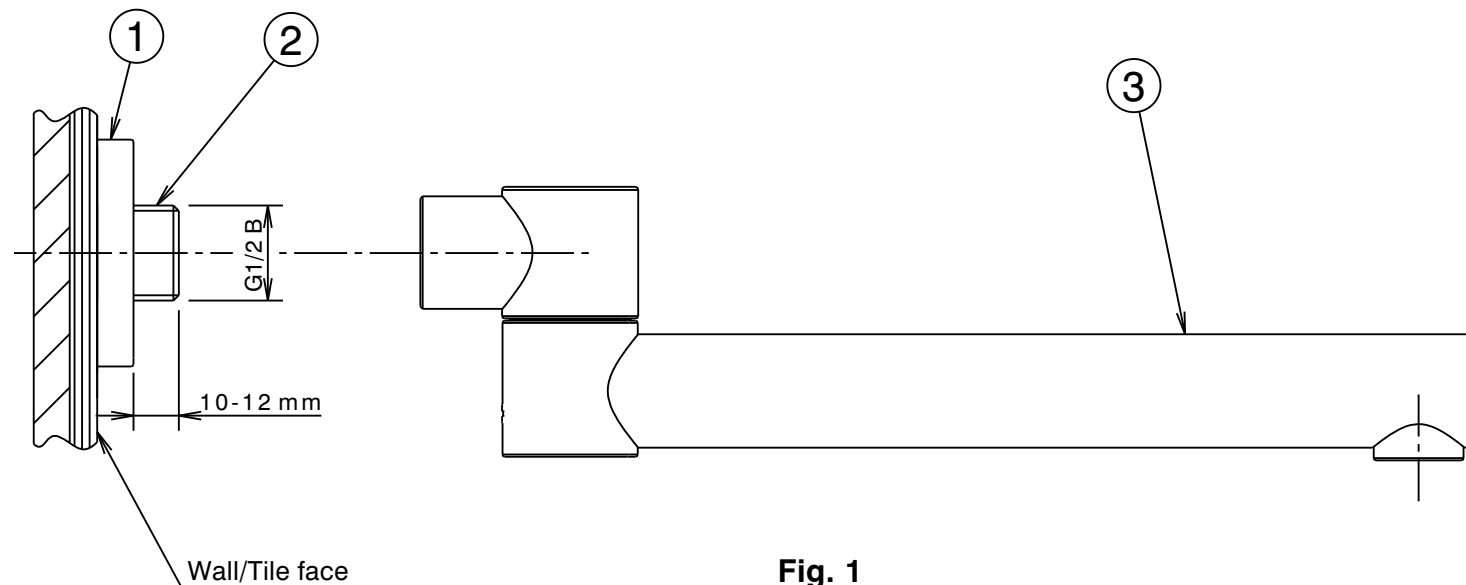


Fig. 1