



ELVIRE ROBE HOOK ACCESSORY

INSTALLATION INSTRUCTIONS

Important Information:

- * Wall anchor (1) is only suitable for use in cavity walls with a tiled surface. If installing into a plasterboard cavity wall (untiled) it is recommended that the accessory be attached to the wall in line with a stud or noggin using suitable screws.
- * For cavity wall applications, the total wall thickness must be 10-16mm when using the supplied wall anchor.
- * Ensure hole centres are vertical before drilling.
- * To prevent drill from wandering on tiled surface it is recommended that masking tape be applied before drilling.
- * Do not use accessory for personal support.
- * Over time, the mounting screws which are used to install the product may be affected by exposure to water, which may cause the screws to rust and loosen. You should periodically check that your accessory is fastened securely to the wall.

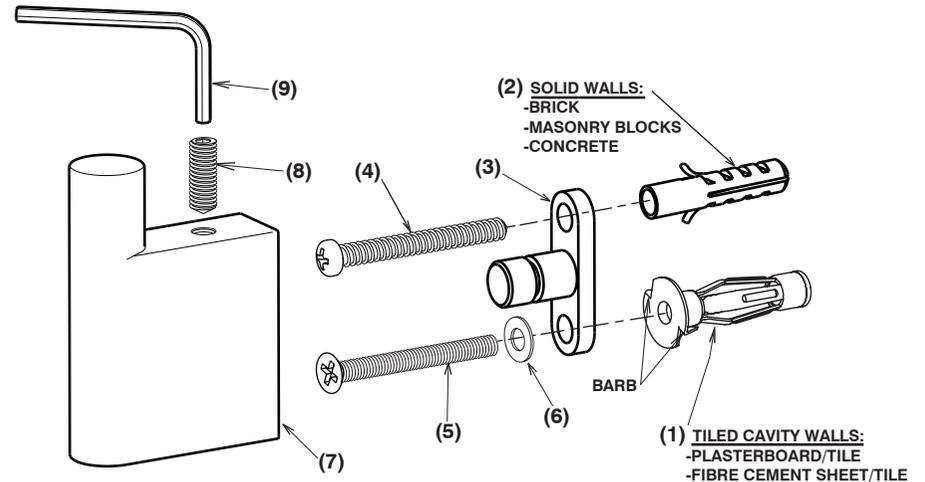


Fig. 1

Installation

A) DETERMINE WALL TYPE:

SOLID WALLS: - (Brick, masonry blocks, concrete etc)

- Drill holes 6 mm diameter, 40mm deep.
- Insert rounded end of wall plugs (2) into drilled holes and tap until flush with the wall surface.
- Fit screws (4) through holes in mounting block (3) before screwing into wall plugs (2). Ensure orientation of mounting block is vertical as pictured in Fig. 2.
- Check alignment of mounting block before tightening screws (4).

TILED CAVITY WALLS: - (Plasterboard/tile, fibre cement sheet/tile)

Note: Total wall thickness must be between 10-16mm when using the supplied wall anchor.

- Drill holes 8mm diameter.
- Flatten barbs on head flange of wall anchors (1). Insert the wall anchors (1) into the drilled holes until the head flange is against the wall surface.
- Fit the wall anchor M4 screws (5) with washers (6) through holes in mounting block (3) before screwing them into installed wall anchors. Ensure orientation of mounting block is as pictured in Fig. 2. ie vertical orientation.
- Check alignment of mounting block before tightening screws (5).

UNTILED CAVITY WALLS: - (Plasterboard)

- Determine a suitable position to attach mounting block (3) so that they can be fixed to a stud or noggin in the wall. Ensure orientation of mounting block is as pictured in Fig. 2. ie vertical orientation.
- Fit suitable screws (4) through holes in mounting block (3) and screw directly into stud or noggin.

B) ATTACH ACCESSORY:

- Loosen the grub screw (8) on the accessory using Allen key (9) provided.
- Install accessory (7) onto fixing plate (3), making sure that grub screw (8) is located above as shown.
- With accessory resting securely against wall surface, tighten the grub screw (8) using Allen key provided (9).

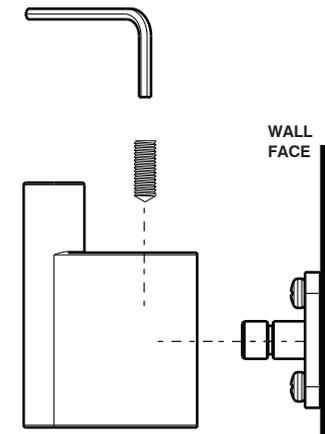


Fig. 2