



# CLARK

# Fascia Hand Basin



Suitable for item codes: Y4101 and Y4101.1


## Wall Mount Installation Instructions

1. Suitable wall mounting brackets (Y4901) may be purchased through your plumbing supplier (2 required).
2. Draw a level line on the wall at the desired height for the basin top. Mark width of basin on the line, in its desired position.
3. Fasten one bracket to the wall so that the top is 1mm below the horizontal line and 1mm inside the basin width mark, from one end. The bracket should be orientated so bolt holes are vertically aligned and below the basin.
4. Slide unsecured bracket into the other side of the basin and then slide the basin onto the fastened bracket. Hold the basin level and mark the bolt holes.
5. Remove the basin and fasten the remaining bracket to the wall using the marked hole positions. Install waste assemblies and tap(s) (if required). It is suggested that silicon sealer be used between the waste grate and basin outlet hole.
6. Slide the basin onto the brackets so it is firmly against the wall and secure through the tiling flange.
7. Plumb up the tap and waste fittings

## Bench Top Installation Instructions

1. Position the basin on the benchtop and locate the centre of where the basin is to be placed.
2. Measure out from the centre a rectangle 476mm long and 386mm deep. Draw the rectangle with a pencil and check size before cutting. Cut inside the pencil line.
3. Position the basin in the cut out hole so that it is properly aligned. Check that basin sealing tape will seal evenly around the edge of the hole.
4. Remove the basin and install taps (if required) and waste assembly. Silicon sealer may be used between waste grate and basin outlet hole.
5. Install the fixing clips evenly around basin.
6. Remove protective backing from sealing tape, apply a continuous bead of silicon sealer between sealing tape and the edge of the basin and quickly place the basin in position. Tighten the fixing clips evenly.
7. Plumb up the tap and waste fittings.

**Measure out from the centre a rectangle 476mm long and 386mm deep. Draw the rectangle with a pencil and check size before cutting. Cut inside the pencil line.**

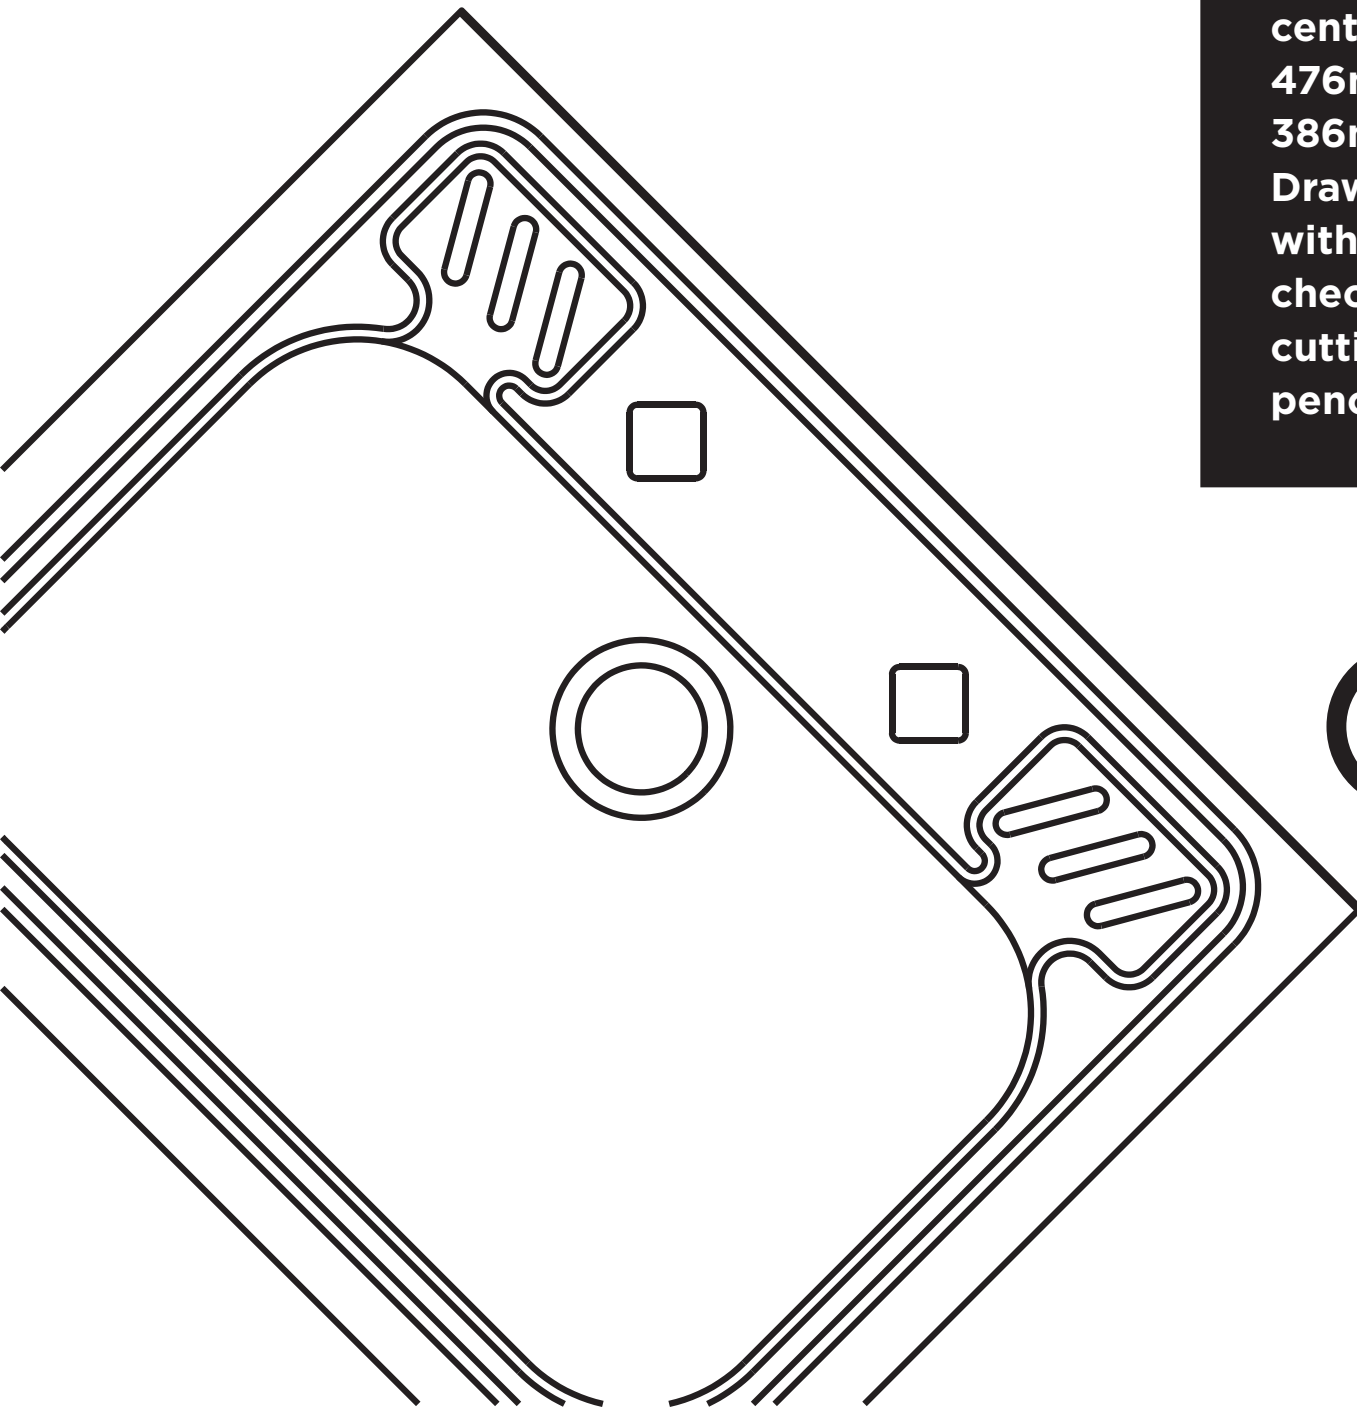

**GWA**  
Bathrooms & Kitchens

Caroma Industries Limited  
ABN 35 000 189 499  
1 Melito Court, Prestons NSW 2170  
National Customer Call Centre  
**13 14 16**  
**caroma.com.au**



New Zealand  
National Customer Call Centre  
**09 279 2700**  
**caroma.co.nz**