


Clark

Round 400 with Tap Landing Vitreous China **Inset Basin**

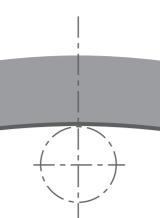

Front


Back

Installation Instructions

- 1. Position template over countertop.
- 2. Attach template cut-out guide to countertop with adhesive tape or otherwise transfer cut-out line to countertop.
- 3. Drill Ø20mm holes and use as jigsaw starter.
- 4. Fit taps and waste assembly to basin.
- 5. Clean underside of the sealing rim and fitting face of basin that comes into contact with the countertop to ensure both are free of dust, dirt and
- 6. Apply a layer of acetic cured silicone sealant around the sealing rim and fitting face of the basin. Important: do not use epoxy sealants.
- 7. Bed the basin on the countertop.
- 8. Connect waste assembly to the trap and plumb taps.
- 9. Clean excess of silicone sealant around basin.

Ø20mm Hole

Basin Rim

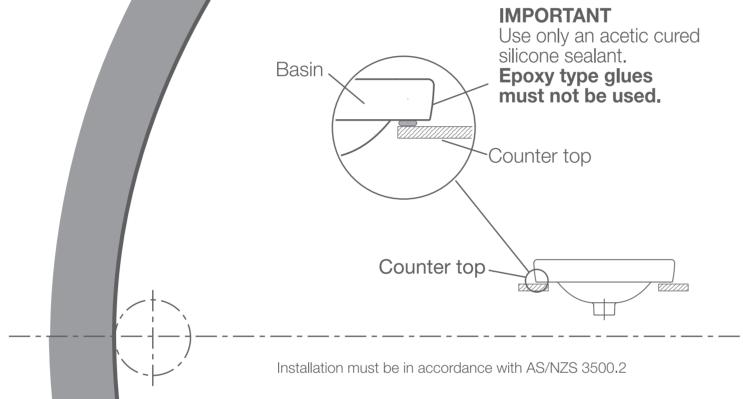

Cut-out template

Cutout Diameter 360mm

Scale