

Care 610 Cleanflush[™]

Sanitary Facilities - Access and Mobility 4.5/3 litre Toilet Suite





The Care 610 Cleanflush™ connector suite offers an elevated pan for easy transfer on and off the seat for those with limited mobility. The added hygiene of the Cleanflush® rimless flushing system makes the range ideal for hospital, aged care and commercial applications where the absolute highest levels of hygiene and rapid cleaning are required. The versatility of the Care 610 pan makes it suitable for use by both ambulant persons with disabilities and wheel-chair users, including commode chairs.

Date

Important: Further reference must be made to AS 1428.1-2009 with current amendments

to determine circulation space, grab rail and installation requirements.

The dimensions in this sheet may change with amendments to the standard.

Care 610 Cleanflush™ 4.5 litre full flush washdown rimless pan with a fully glazed trap. Pan:

Traps: S or P-trap unvented only.

Inlet: 50mm back inlet 40mm key seal is available if required.

Profile Smartflush Cistern (wall fix version) - has a free fitting lid and is suitable for Cistern: domestic and light commercial applications.

Important: Working pressure minimum 30kPa to maximum 1000kPa flow

pressure. Rain water tank compliant.

Round Care Button - Chrome (supplied). Other button options sold separately. See

Section 4.01 for further details

Inlet and Standard Bottom Entry Cistern - available as right hand inlet which is Overflow: interchangeable and incorporates Quietflow inlet valve. Internal overflow only.

Caravelle Care seat supplied, available in Caroma White (W), Sorrento Blue (SB) and Seats: Anthracite Grey (AG). See Section 3 SEATS for further details. Reference to AS1428.1-

2009 must be made in regards to luminance contrast when selecting the seat colour. For wheel chair access the installed pan must be a minimum of 800 \pm 10mm from the front of the pan to the finished wall and provide a seat height of 460 to 480mm. The projection requirements for people with ambulant disabilities is 610 to 660mm (refer to

Position of The underside of the cistern must be 600mm minimum from the finished floor. The the Cistern: push button height must be no greater than 1100mm from the finished floor.

Installation: The installation of the toilet suite shall be in accordance with the normal minimum drainline grade requirements in AS/NZS 3500.2.

White only

All dimensions are in millimetres and are subject to normal manufacturing variations. **Dimensions:**

Caroma pursues a policy of continuing improvement in design and performance of its products. The right is therefore reserved to vary specifications without notice




Note: The projection requirements detailed on this illustration are for wheel chair access only. The projection requirements for people with ambulant disabilities is 645 to 660mm.

All height dimensions to underside of pan, make allowance for mortar bedding.

Mortar bedding: The pan should be fixed to the floor with a sand cement mixture of 3:1 to a depth of 60mm. When bedded the back of the foot of the pan should be approximately 10mm above the finished floor.

Screw fixing: The pan should be bedded with an acetic cured silicone sealant and fixed with corrosion resistant screws and pan guard washers. Use Caroma pan fixing kit. Code No 601150

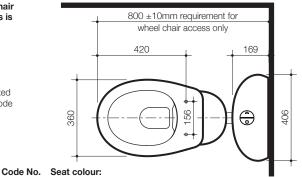

Care 610 Cleanflush **Toilet Suites:** with Caravelle Care Seat

Buttons:

Position of

the Pan:

Colours:

Single Flap	S trap	982931	W, SB or AG
	P trap	982941	W, SB or AG
Single Flap, Backrest Curved Arm	S trap	982931B	W, SB or AG
Included	P trap	982941B	W, SB or AG

