Ø30/35mm

# WATER EFFICIENT TAPWARE

# PLUMBERS INSTALLATION INSTRUCTIONS

### Important Information

- \* Showerhead and shower arms sold separately.
- \* Not suitable for gravity feed systems.
- \* The showerhead is fitted with a flow regulator. It may not be suitable for connection to some gravity fed Water Heaters, some low pressure supply networks, some Instantaneous Water Heaters, some Tempering Valves, some Solar Water Heaters & some Thermostatic Mixing Valves. Check with the manufacturers of these products.
- \* All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

#### Installation

- 1) Check that threaded nipple (2) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread. Important: Care must be taken that thread tape cannot become dislodged and block the flow regulating device. causing a reduction in water flow.
- 2) Ensure strainer washer (4) is fitted to the inlet socket of the showerhead (5), then screw the showerhead (5) onto the outlet thread of the shower arm (3). Tighten using a suitable spanner, taking care not to damage the decorative finish.
- 3) Place the cover plate (1) over the threaded nipple (2). Screw the G1/2 inlet thread of the shower arm (3) onto the threaded nipple (2), taking care not to damage the decorative finish. Align the cover plate (1) before tightening the shower arm (3), DO NOT OVERTIGHTEN.

#### **IMPORTANT**

### Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa New Regulation :-500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1-2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.

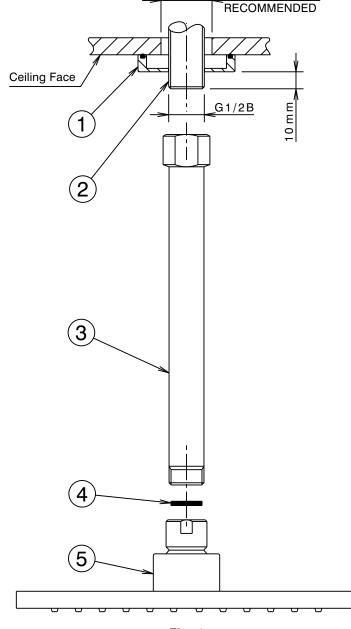


Fig. 1