

PLUMBERS INSTALLATION INSTRUCTIONS


Important

- * The wall elbow (4) is fitted with a check valve (5) and flow regulated check valve (6).
- Note: Warranty is void if check valve (5) & flow regulated check valve (6) are not installed as shown.**
- * **Not suitable for gravity feed systems.**
- * **The flow of water to the handshower is regulated.**
This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products.
- * **All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.**

Installation

- 1) Check that threaded nipple (1) is the correct length as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important: Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow
- 2) Fit seal (2) into groove in base (3). Assemble base (3) into wall elbow (4) then screw the wall elbow onto the threaded nipple (1) and position so that the hose (9) will hang vertically down and handshower holder (4a) is horizontal. **DO NOT OVERTIGHTEN.**
- 3) Ensure that check valve (5), flow regulated check valve (6) & 'O' ring (7) are in position in wall elbow (4) then screw the shorter conical end (8) of hose (9) onto wall elbow (4) & tighten. Connect the longer conical end (10) of hose (9) to handshower (11) and tighten. Place handshower (11) into handshower holder (4a) with shower hose hanging freely. Handshower holder inclination angle is adjustable by pivoting.
Important: If water does not flow from handshower (11) make sure that check valves (5 & 6) are installed with the arrows pointing in the direction of flow.

HANDSHOWER - TWO FUNCTIONS
 SPRAY (OUTER HOLES)
 MASSAGE (INNER HOLES)

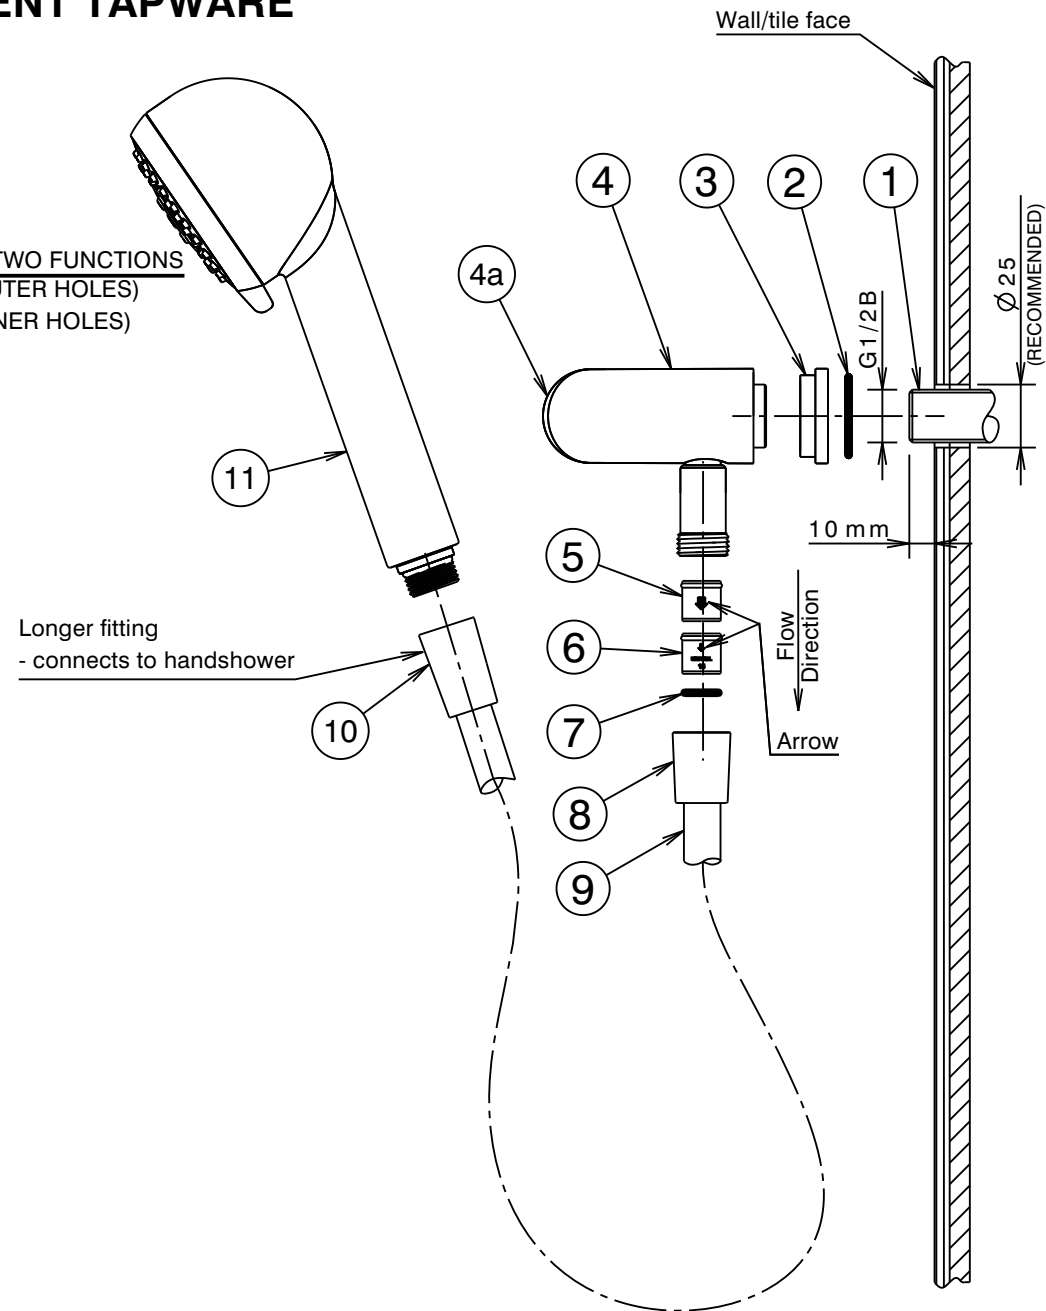

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation:- 500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Maximum hot water temperature : 80°C.