

TITAN - 200mm SHOWERHEAD

WATER EFFICIENT TAPWARE

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information


- * Shower arm (5) is sold separately.
- * Showerhead is fitted with a flow regulator.
- * Not suitable for gravity feed systems.
- * All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.

Installation

- 1) Check that threaded nipple (1) is the correct length, as shown. Cut to length if required ensuring end face is square. Apply thread tape to the thread.
Important : Care must be taken that thread tape cannot become dislodged and block the flow regulating device, causing a reduction in water flow.
- 2) Ensure strainer washer (6) is fitted to the inlet socket of the showerhead (7), then screw the showerhead (7) onto the outlet thread of the shower arm (5). Tighten using a suitable spanner, taking care not to damage the decorative finish.
- 3) Ensure the 'O' Ring (2) is fitted to the groove in the cover plate (3), as shown. Slide the cover plate (3), with 'O' Ring (4) in position as shown, onto the shower arm (5). Screw the arm (5) onto the threaded nipple (1) until its base is adjacent to the wall surface & the outlet is pointing downwards, taking care not to damage the decorative finish.
DO NOT OVERTIGHTEN.
Slide the cover plate (3) along the arm (5) until the 'O' Ring (2) has contacted the wall surface.

Cleaning the Shower Head

Shower head (7) uses 'Rub Clean' technology. If nozzles (8) become blocked, Simply rub the nozzles gently during use to dislodge any foreign particles in the nozzle holes.

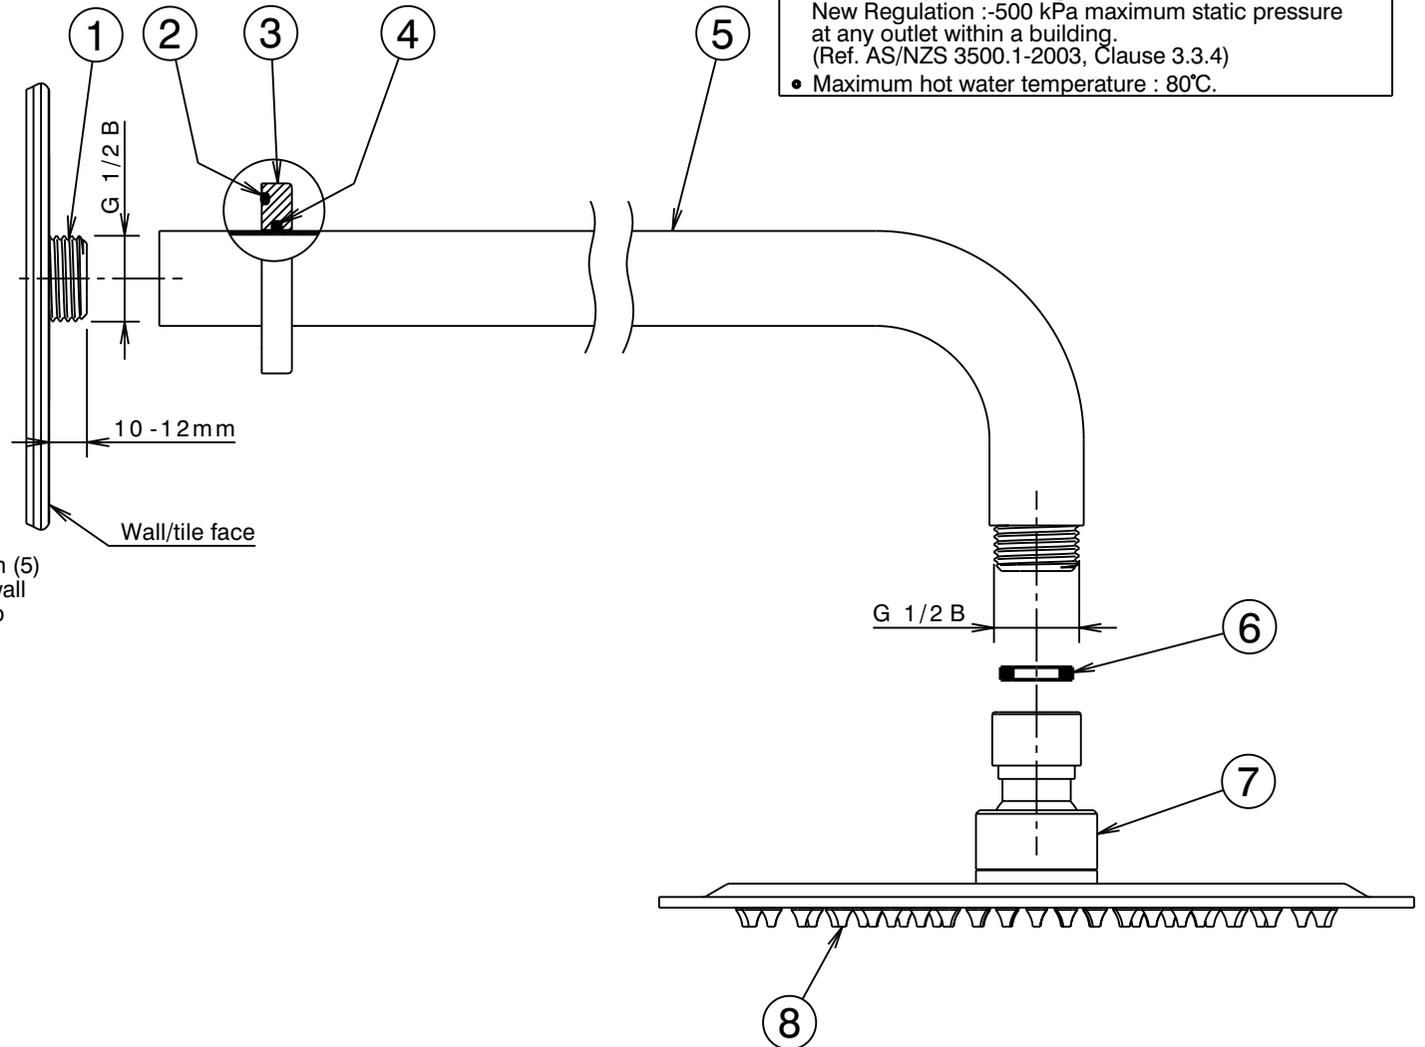

IMPORTANT

Pressure & Temperature Requirements.

- Hot and cold water inlet pressures should be equal.
- Static inlet pressure range : 150 -1000 kPa
New Regulation :-500 kPa maximum static pressure at any outlet within a building.
(Ref. AS/NZS 3500.1-2003, Clause 3.3.4)
- Maximum hot water temperature : 80°C.