

PLUMBERS INSTALLATION INSTRUCTIONS

Important Information

* For warranty details refer to www.clark.com.au

Installation

- 1) Check in-wall depth (dimension 'A' in Fig. 1) to ensure correct length spindle (3) has been selected (see Table 1).
- 2) Check seats in recess tap bodies (1) are in good condition and free of foreign materials. Reseat if required.
Important : All pipework must be thoroughly flushed prior to installation, to remove all foreign matter.
- 3) Fully open tap spindle (3) in tap head assembly (2). Ensure fibre washer and jumper valve are in position as shown.
- 4) Screw tap head assembly (2) into recess tap body (1) by hand and tighten using suitable tube spanner.
- 5) Screw wall flange (4) over each installed tap head assembly (2), and tighten fully by hand against wall/tile face, taking care not to damage the decorative finish.
- 6) Fit handle assembly as follows:-
 - i) Turn both spindles (3) to the fully closed position.
 - ii) Place retaining nut (6) over spindle (3), with slot facing flange (4).
 - iii) Place retaining clip (7) into groove at bottom of spline in spindle (3).
 - iv) Ensure handle insert (8) is in position in handle (9). Fit handle (9) to spline of spindle, position to suit then push firmly onto spindle until it bottoms internally. Screw retaining nut (6) into handle and tighten with spanner (5) provided.

IMPORTANT	
Pressure & Temperature Requirements.	
• Hot and cold water inlet pressures should be equal.	
• Static inlet pressure range : 150 -1000 kPa New Regulation :-500 kPa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)	
• Maximum hot water temperature : 80°C.	
Installation Requirements.	
• The installing plumber is responsible for waterproofing all penetrations for Taps in Shower areas at installation by a proprietary flange system or a sealant.(Ref AS3740)	

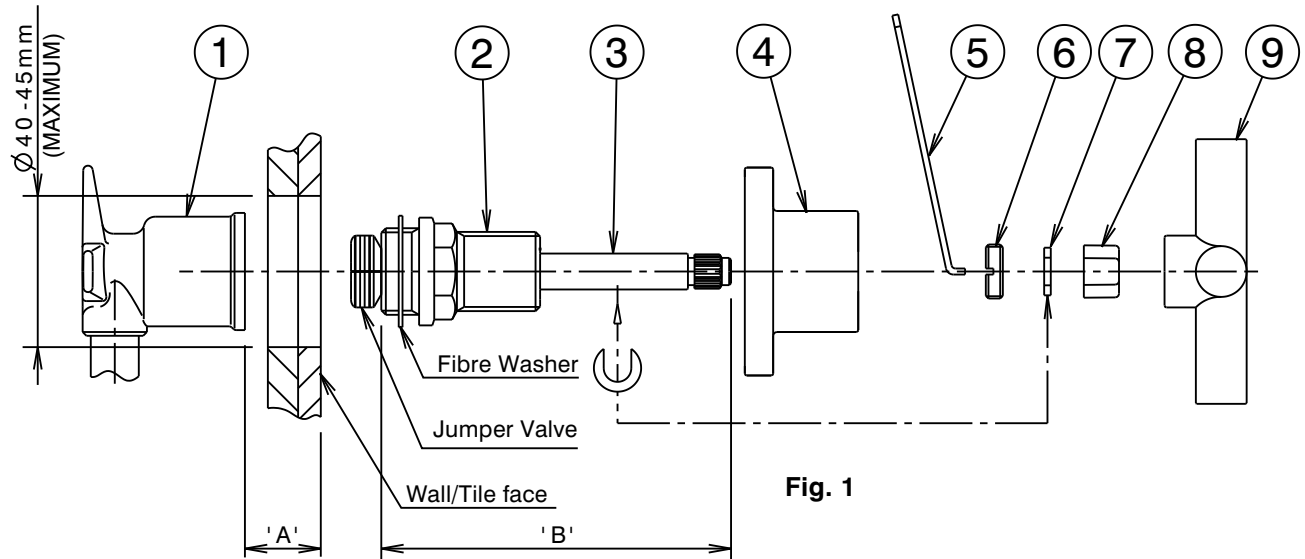


Fig. 1

Table 1

Dimension 'A'	Cartridge Ass'y	Dimension 'B'
0 - 13mm	Standard Length	92.5mm
13 - 26mm	13mm Extended	105.5mm